

Aluminum rims

Corrosion happens when you have aluminum and steel in close contact.

They don't mix well.

Brakes are steel, therefore when aluminum rims are installed, they cause corrosion to happen.

The corrosion causes the wheels to come loose from movement.

It is necessary to clean and lubricate these surfaces at least twice a year.

